

# iDash Parameter List - 2007 Porsche 911 (977) 3.6L

## Air Density

Label	Description	Unit
J607	Correction Factor SAE J607	
AAD	Density - Ambient Air	LB/1KFT3
AAD	Density % - Ambient Air (J607)	%
DN-ALT	Density Altitude	FT
PR-ALT	Pressure Altitude	FT
SAT-P	Saturation Pressure	INHG
VAP-P	Vapor Pressure	INHG

## Emissions

Label	Description	Unit
EVAPCM	EGR Commanded	%
CAT M	EGR Recirc Error	%
COMP M	Evap Purge Commanded	%
EVAP M	Monitor - Catalyst	
FUEL M	Monitor - Comprehensive Component	
MIS M	Monitor - EGR and/or VVT System	
O2S M	Monitor - Evaporative System	
HTR M	Monitor - Fuel System	
SAIR M	Monitor - Misfire	

## Pressure

Label	Description	Unit
AAP	Ambient Air Pressure	PSIA
AAP	Ambient Air Pressure (in hg)	INHG

## Temperature

Label	Description	Unit
	Ambient Air Temp	°F
AAT	Ambient Air Temp Absolute (in Rankin)	R
CAT1/1	Catalyst Temp Bank 1 Sensor 1	°F
CAT2/1	Catalyst Temp Bank 2 Sensor 1	°F
SYS-DT	Delta Temperature System	
THR-DT	Delta Temperature Throttle	°F
ECT	Engine Coolant Temp	°F
IAT	Intake Air Temp	°F
MAT	Manifold Air Temp	°F

## Engine Performance - Air

Label	Description	Unit
TPS B	Absolute Throttle Pos B	%
ABSTPS	Absolute Throttle Position	%
HPC-1K	Ambient Custom Fuel Power Potential per 1000 CFM	HP/1k
HPD-1K	Ambient Diesel Power Potential per 1000 CFM	HP/1k
HPE-1K	Ambient E85 Power Potential per 1000 CFM	HP/1k
HPG-1K	Ambient Gas Power Potential per 1000 CFM	HP/1k
HPM-1K	Ambient Methanol Power Potential per 1000 CFM	HP/1k
CFM-EN	CFM Engine	
CFM-IND	CFM Inducted	
MAF	Mass Air Flow	GRAM/S
THRCMD	Throttle Commanded	%
THRT-R	Throttle Position Relative	%

## Engine Performance - Fuel

Label	Description	Unit
	Air Fuel Ratio Bank1 Sensor1	AFR
AFR2/1	Air Fuel Ratio Bank2 Sensor1	AFR
AFRCMD	Air Fuel Ratio Commanded	AFR
AFRERR	Air Fuel Ratio Error	AFR
LOOP	Fuel Closed Loop Status	
FUEL L	Fuel Tank Level	%
LTFT1	Long Term Fuel Trim Bank 1	%
LTFT2	Long Term Fuel Trim Bank 2	%
STFT1	Short Term Fuel Trim Bank 1	%
STFT2	Short Term Fuel Trim Bank 2	%
TFT 1	Total Fuel Trim Bank 1	%
TFT 2	Total Fuel Trim Bank 2	%

## Voltage

Label	Description	Unit
	B-Bus Battery Voltage	V
BATT	ECU Battery Voltage	V
O2 1/2	O2 Bank 1 Sensor 2 Volt	V
O2 2/2	O2 Bank 2 Sensor 2 Volt	V
O2 1/1	WB O2 Current Bank1 Sensor1	MA
O2 2/1	WB O2 Current Bank2 Sensor1	MA

## Vehicle Performance

Label	Description	Unit
LOAD	Accelerator Pedal D	%
APP D	Accelerator Pedal E	%
APP E	Calculated Engine Load	%
LOAD	Engine Displacement	L
DISP	Engine Reference Torque	FT-LB
HP-MAX	Horsepower ECU	HP
HP-POT	Horsepower Estimated	HP
IGN TM	Torque % Actual	%

## Diagnostics

Label	Description	Unit
MILDIS	Dist Traveled While MIL Active	MILES
DTCTRV	Distance Since DTCS Cleared	MILES
RUN TM	Engine Run Time	MIN
FLAG	Flag	
MIL	MIL Status	
WARMUP	Run Time Since DTCS Cleared	MIN

## Speed and Velocity

Label	Description	Unit
RPM	Engine RPM	
SPEED	Vehicle Speed	MPH